

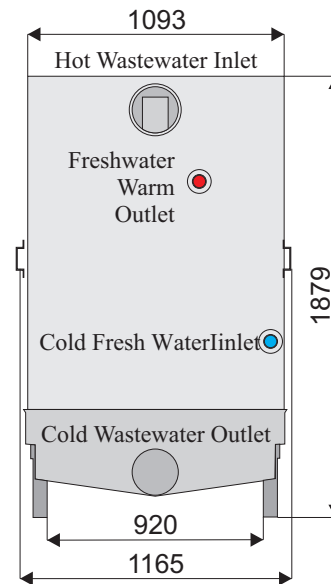
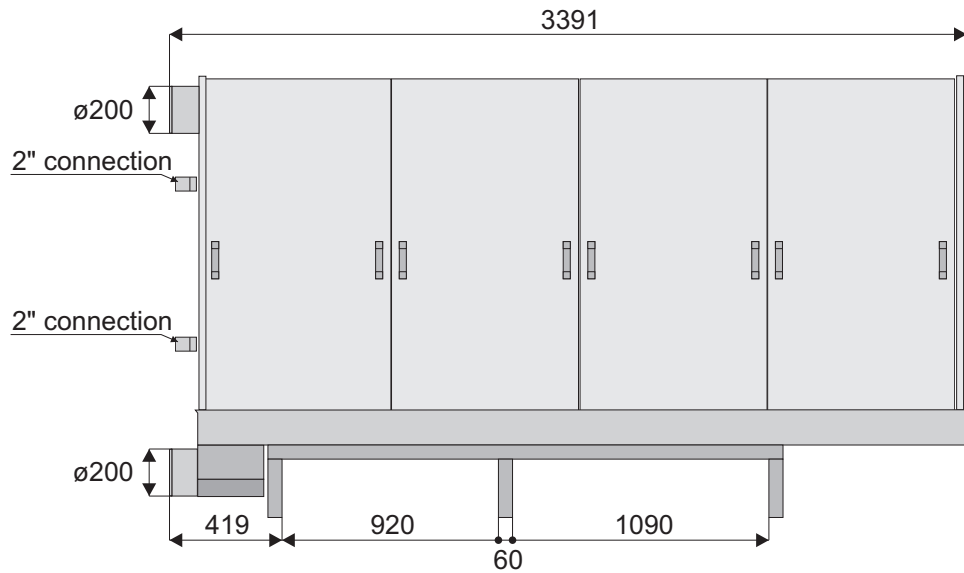




Datasheet: FERNETT Wastewater Heat Exchanger Type VESUV 1 16 Heat-Transfer-Plates Type ZWT

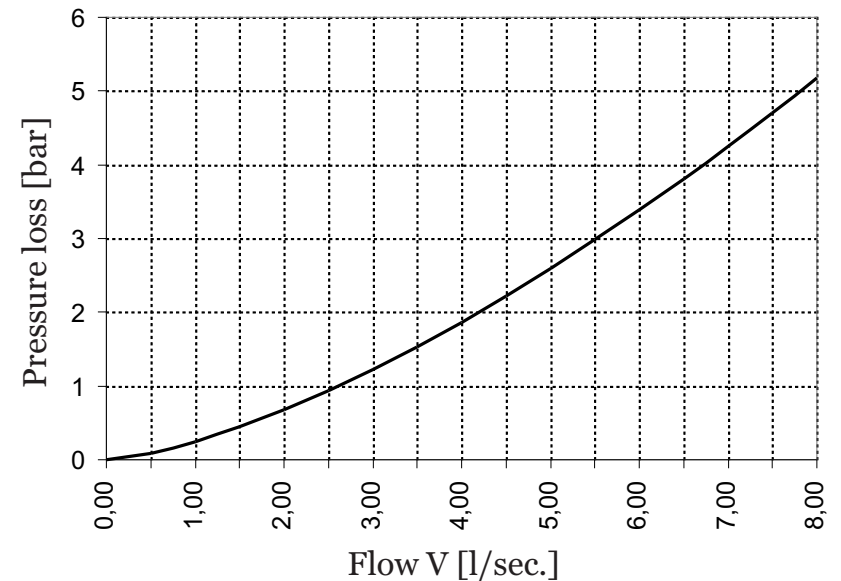


Freshwater Pressure Loss:

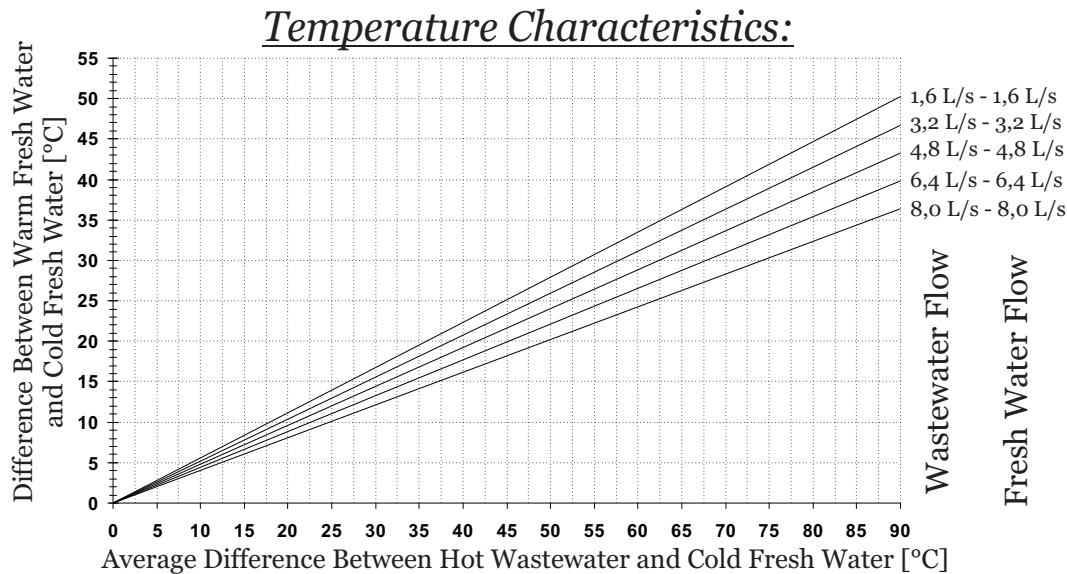


Datasheet: FERNETT Wastewater Heat Exchanger Type VESUV 2 12 Heat-Transfer-Plates Type ZWT

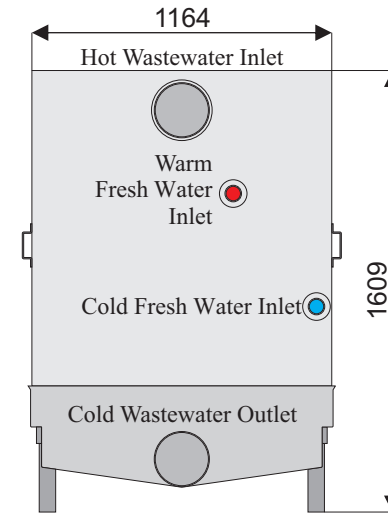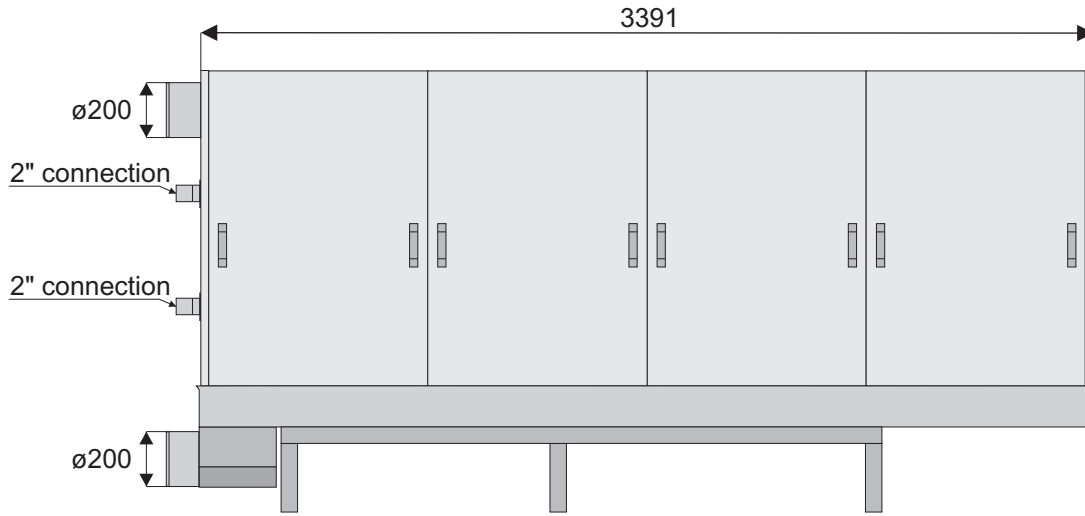



Temperature Characteristics:

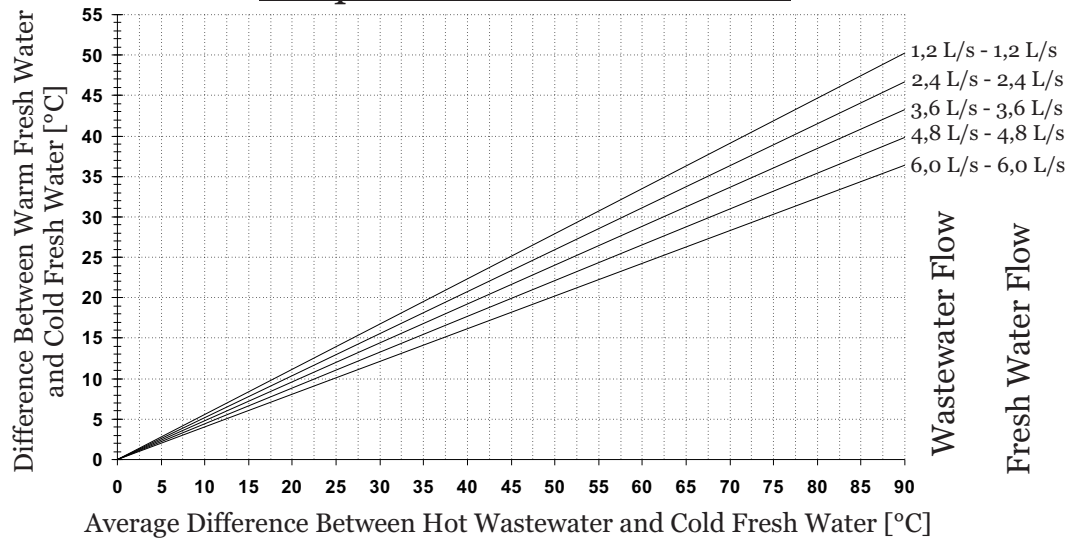

Freshwater Pressure Loss:


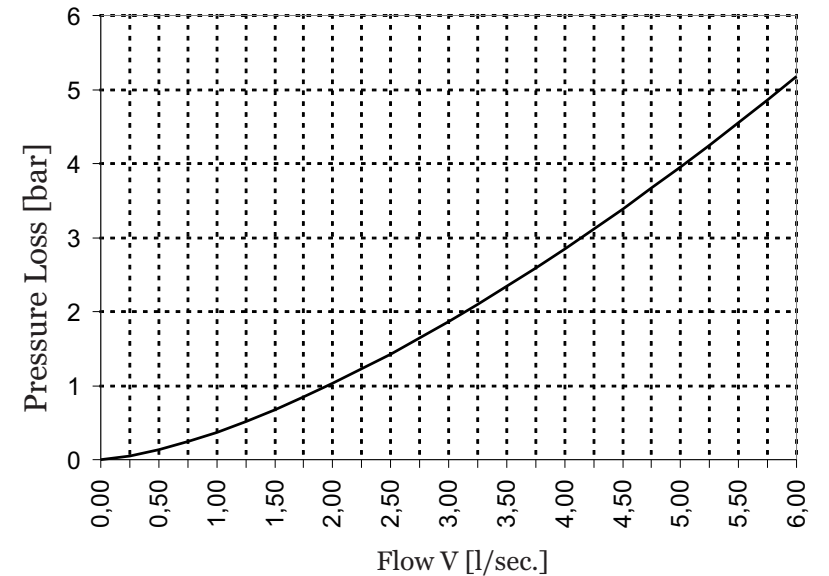


Datasheet: FERNETT Wastewater Heat Exchanger Type VESUV 3 8 Heat-Transfer-Plates Type ZWT

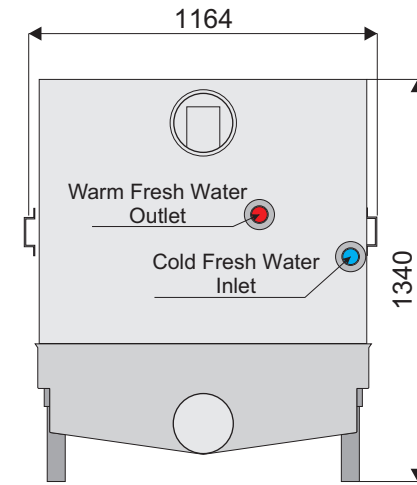
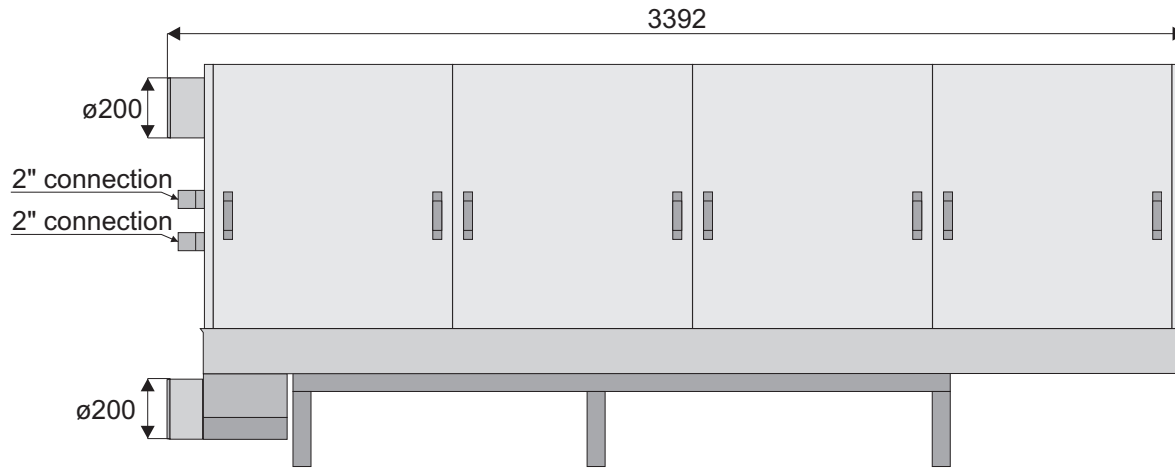


Freshwater Pressure Loss:


Temperature Characteristics:

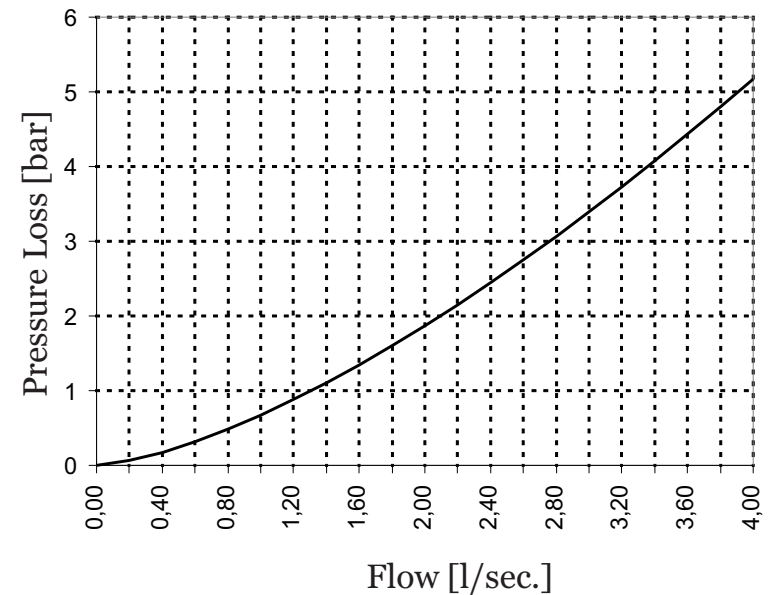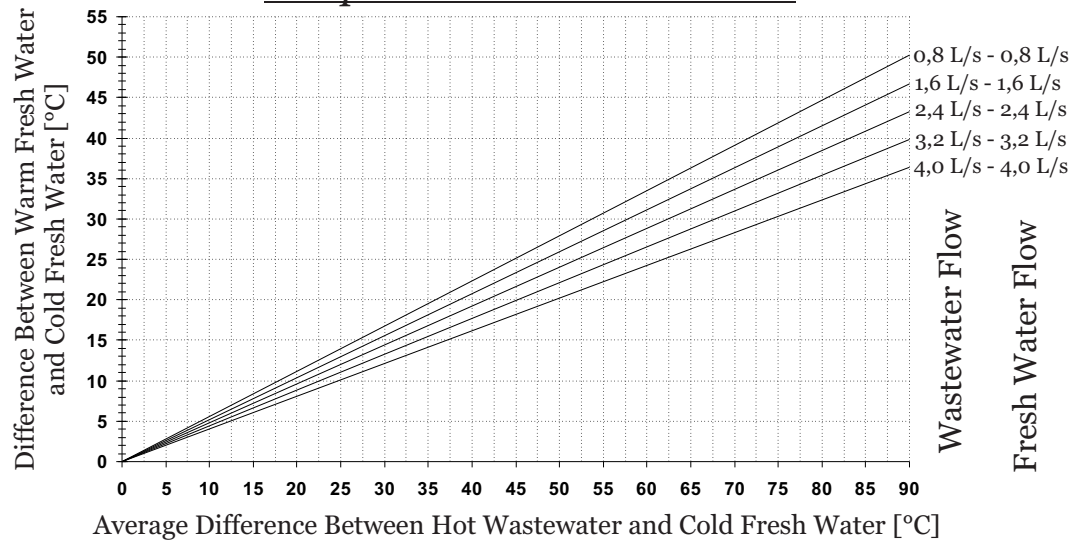


Datasheet: FERNETT Wastewater Heat Exchanger Type **VESUV S-4** 4 Heat-Transfer-Plates Type ZWT

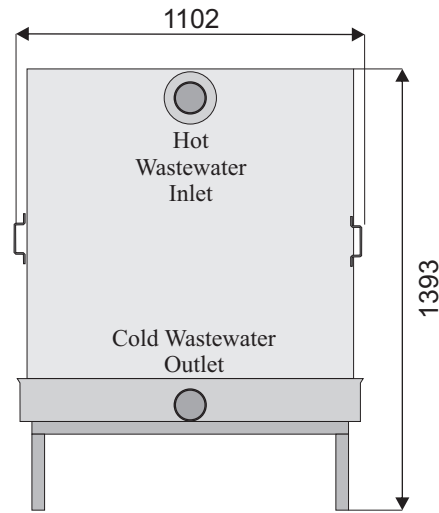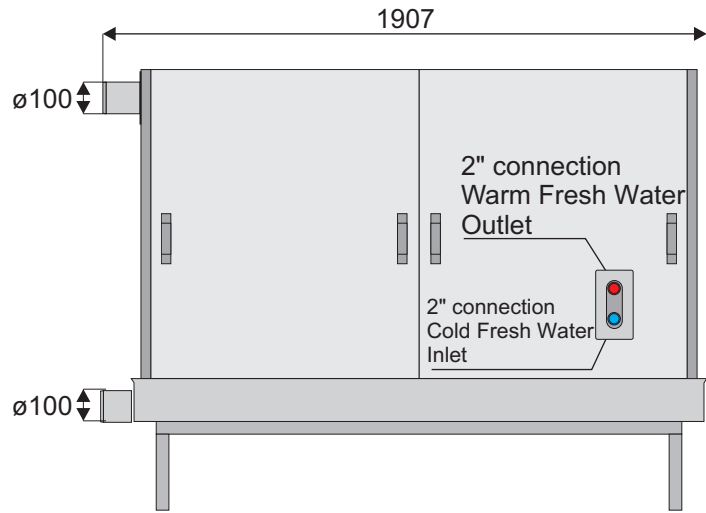


Temperature Characteristics:

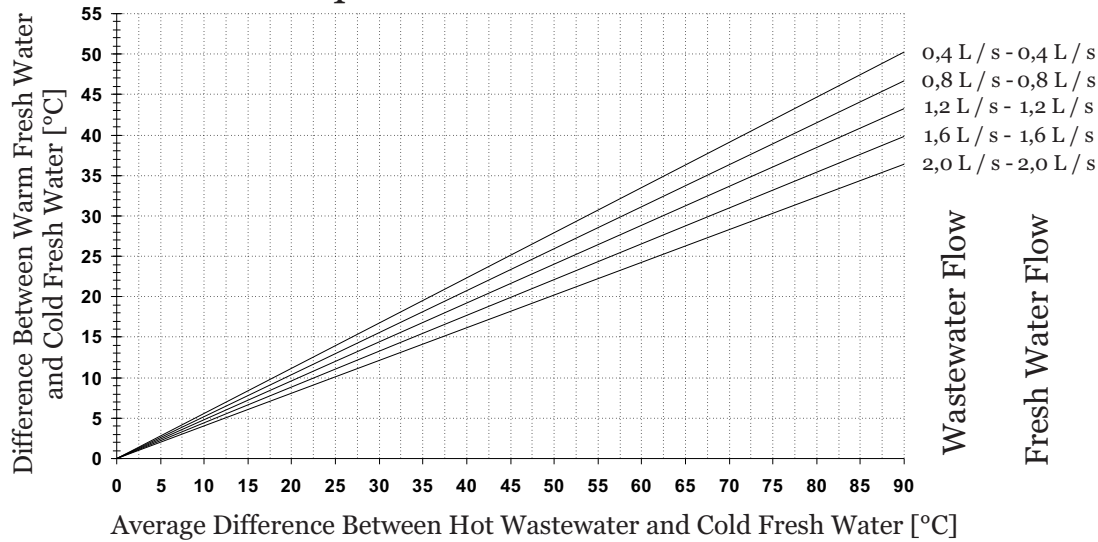


Freshwater Pressure Loss:

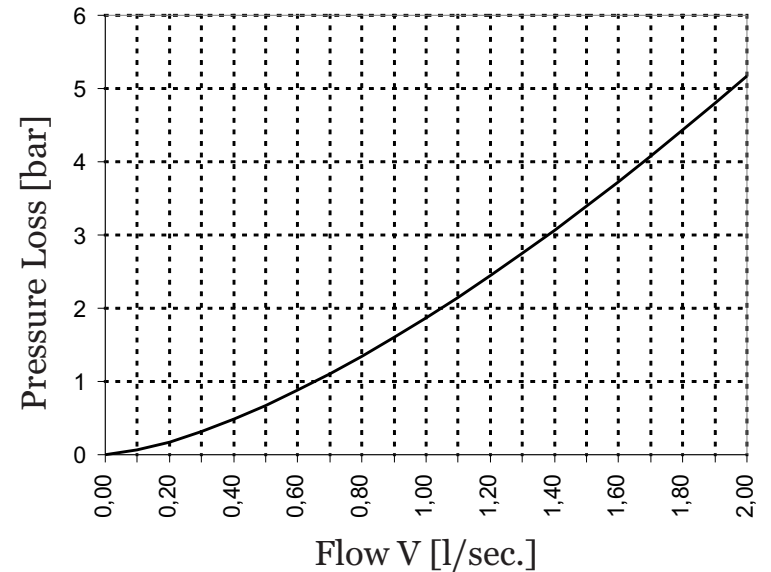


Datasheet: FERNETT Wastewater Heat Exchanger Type **VESUV S-6** 6 Heat-Transfer-Plates Type ZWT

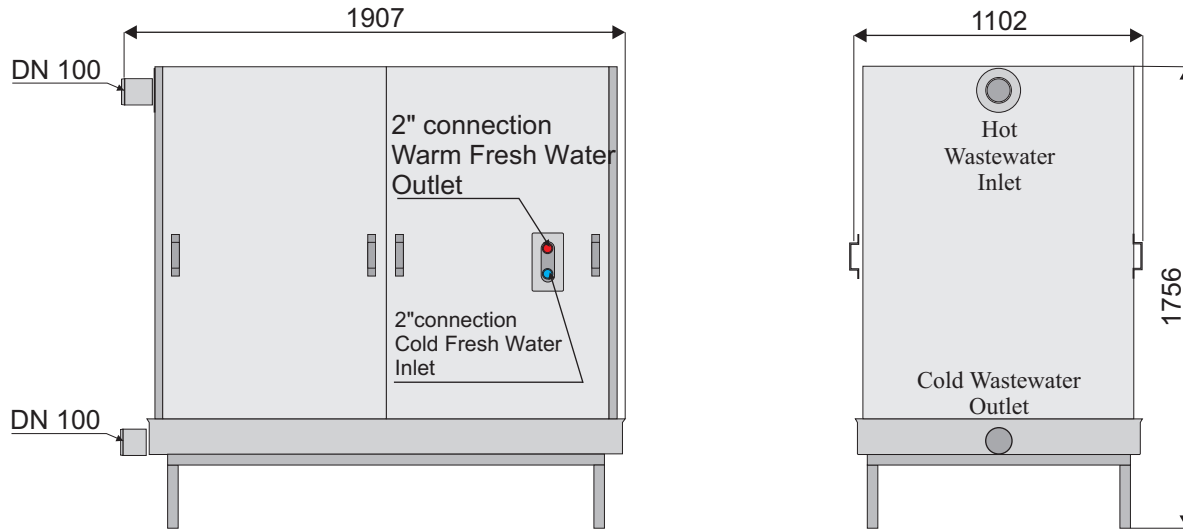


Temperature Characteristics:

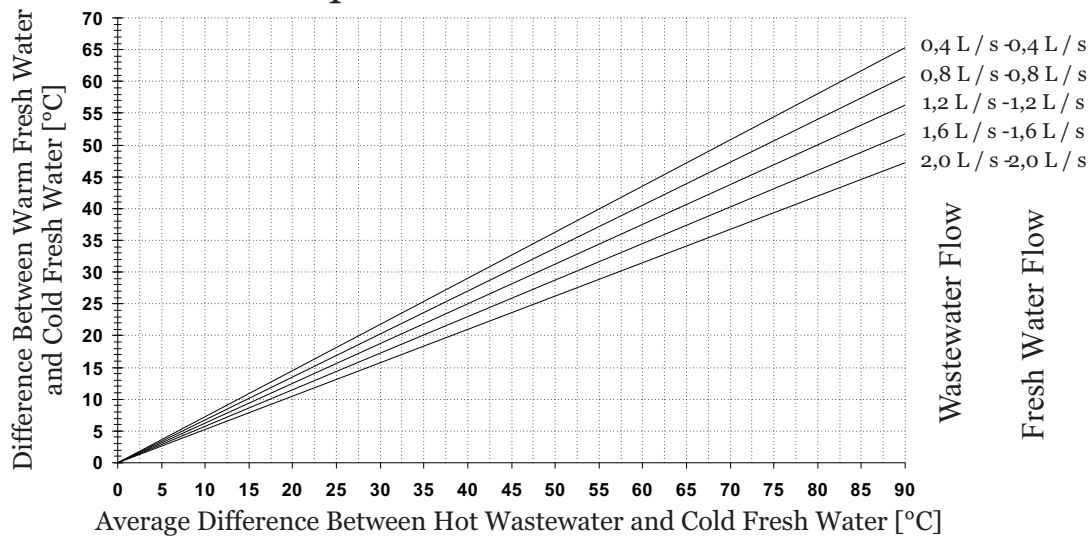


Freshwater Pressure Loss:

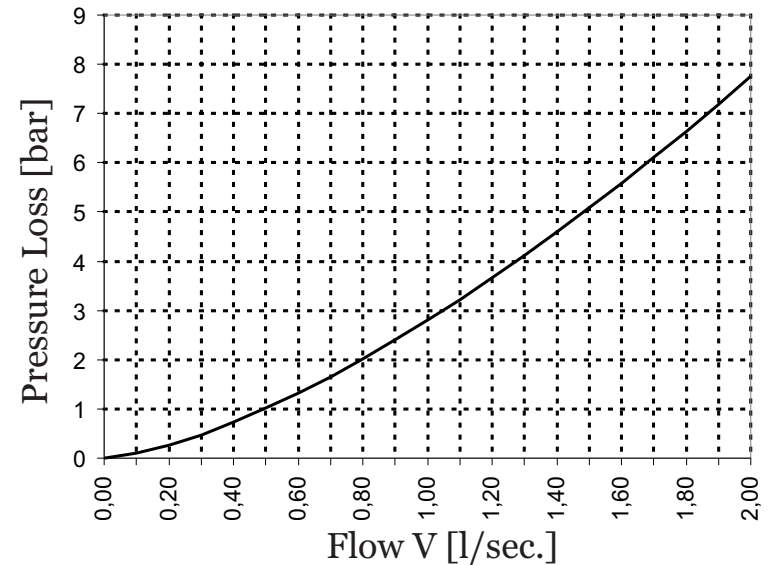


Datasheet: FERCHER Wastewater Heatexchanger Type VESUV S-8 8 Heat-Transfer-Plates Type ZWT

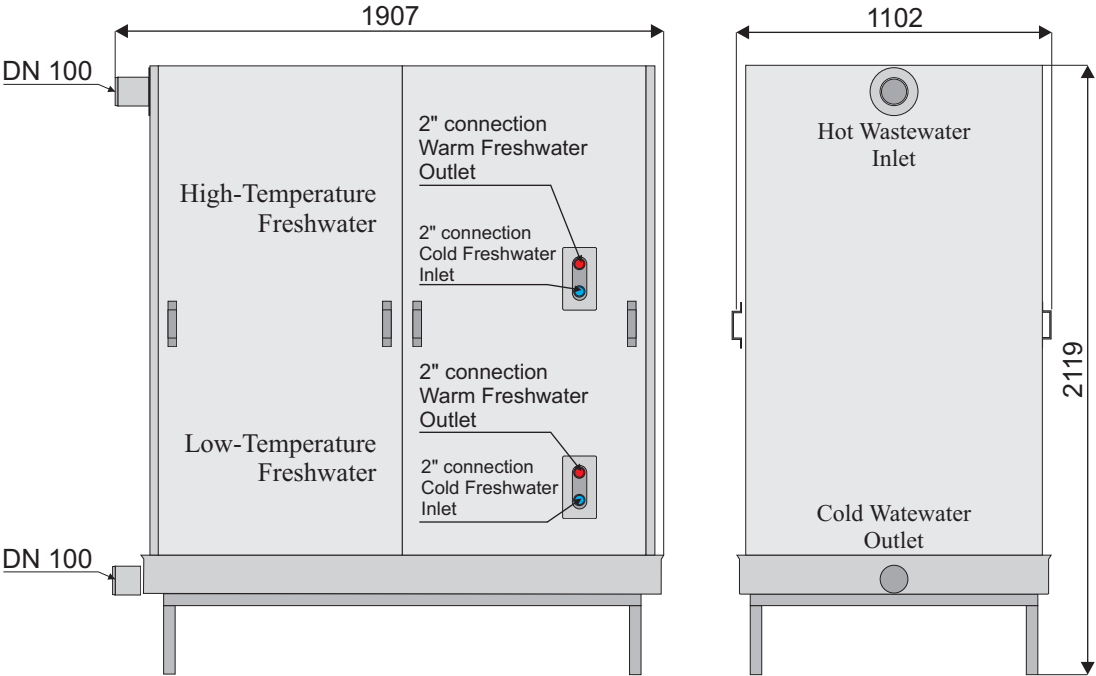





Druckverlust Nutzwasser:

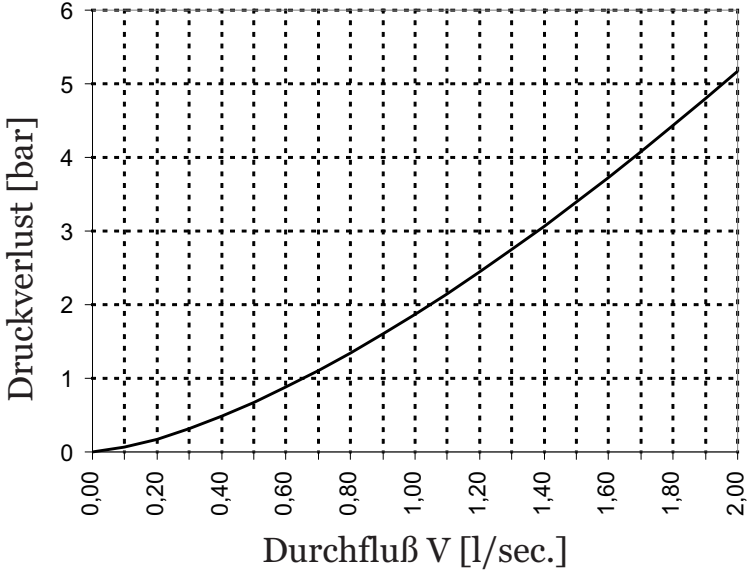

Temperature Characteristics:

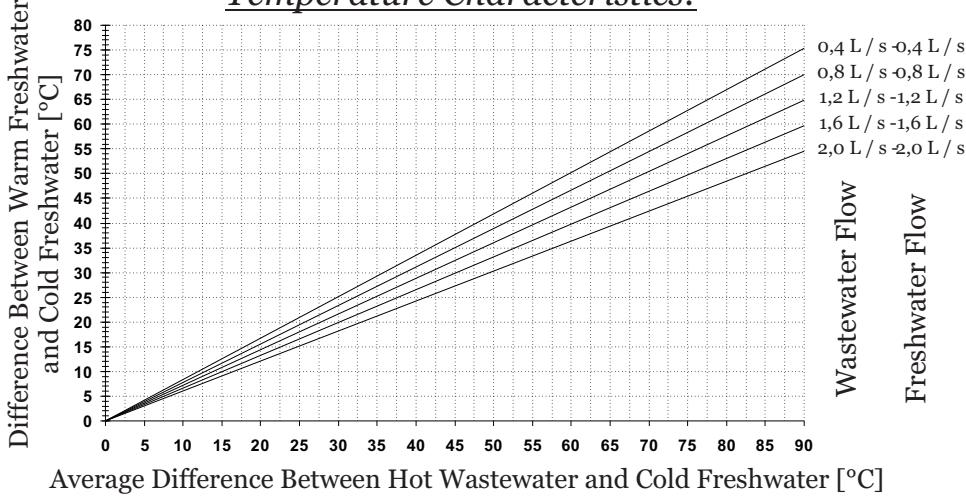

Datasheet: FERCHER Wastewater Heat Exchanger Type VESUV XS 2 Heat-Transfer-Plates Type ZWT

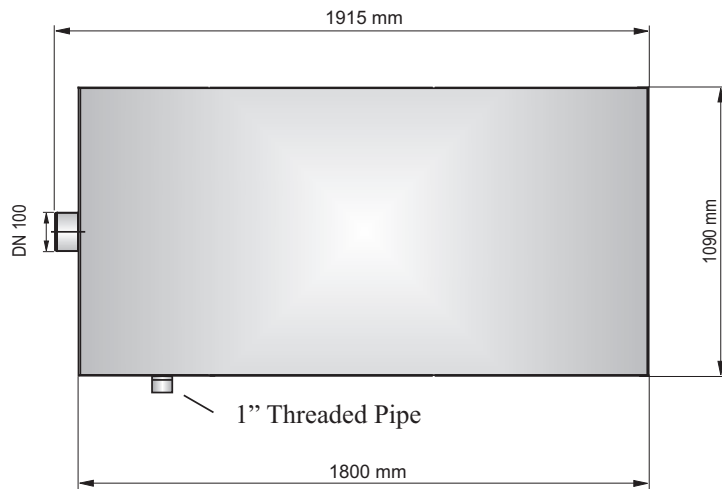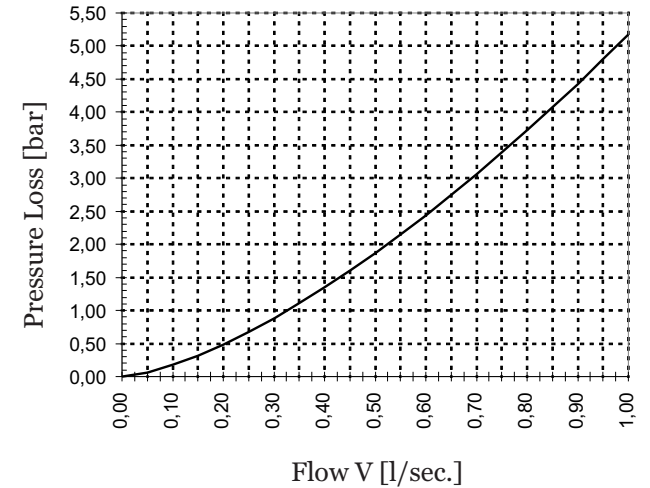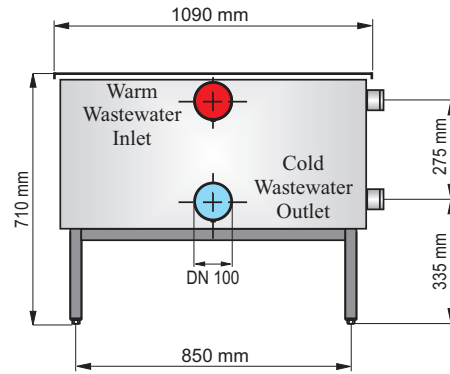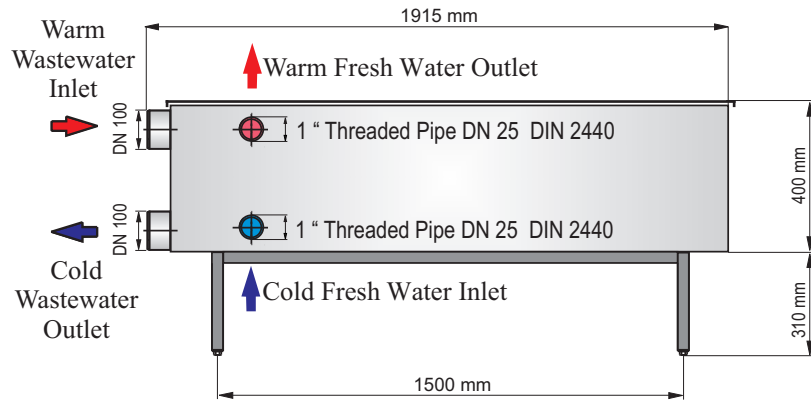

Temperature Characteristics:

